

INSTALLATION INSTRUCTIONS


CABINS



HI5VP




HI5VPP

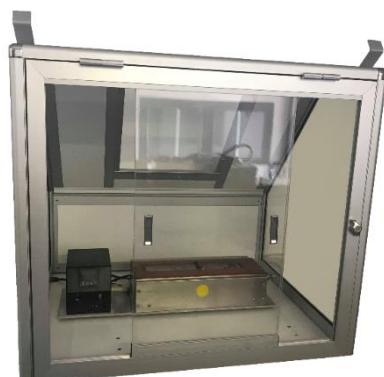

HI5VPC


To complete the assembly of the cabin, it is necessary to have :

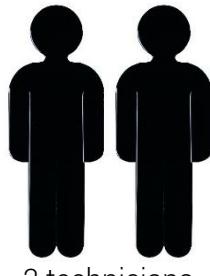

2 technicians



30 minutes

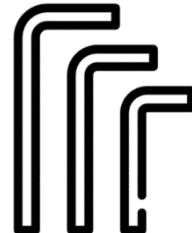

3 Allen keys : 2 – 2.5 – 3 mm

The assembly of the H15 base in 6 steps::

1. Lay one side of the cabin flat on the floor protected by a cardboard box or on a suitable work surface



2. Clip the two non-slip pads on the bottom of the side, perform the same operation on the second



3. Place the bottom profile of the cabin on the smaller side and screw



4. Slide the melamine then remove the second profile and screw



5. Slide the central panel into the profile rail



6. Slide the profile at the top of the central panel and screw



Finalize your cabin according to the model:


HI5VP (a): page 4

HI5VPP (b): page 5


HI5VPC (c): page 6

For the HI5VP, follow the directions below

(a)1. Fit the quarter-round section profile onto the tripod

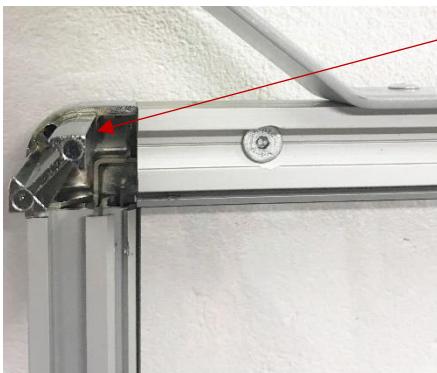

(a)2. Slide the window between the two profiles, keeping a slight pressure on the quarter-round section profile

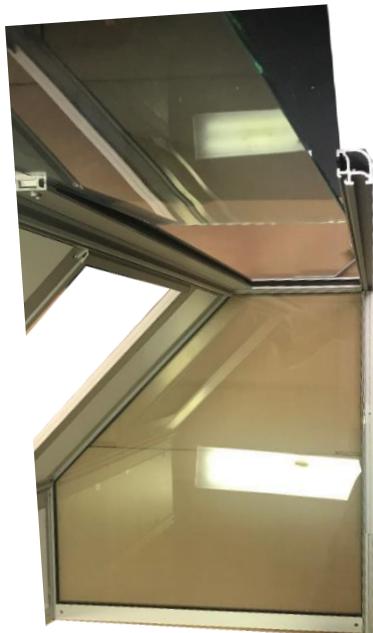

(a)3. Carefully position the second side. Once properly fixed, screw the 4 profiles



For the HI5VPP, follow the directions below

- (b) 1. Fit the quarter-round section profile onto the tripod (check that the hinges are fixed to the profile)
- (b) 2. Slide the window between the two profiles, keeping a slight pressure on the quarter-round section profile
- (b) 3. Carefully position the second side. Once properly fixed, screw the 4 profiles
- (b) 4. If necessary, adjust the hinges then insert the studs.

CAUTION: The studs must be inserted in opposite directions -> <- to avoid the risk of the door sliding out in the raised position.



- (b)5. Finally, gently slide the door through one stud and then the other.



- (b)6. Finally, screw the door hinges to secure the whole.

For the HI5VPC, follow the directions below

- (c)1. Fit the quarter-round section profile onto the tripod
- (c)2. Slide the high pane between the two profiles while maintaining slight pressure on the quarter-round section profile
- (c)3. Slide the double high slide



- (c)4. Position then screw the guide rail (initially inserted on the profile)
- (c)5. Carefully position the second side, screw the 4 profiles




- (c)6. Straighten the cab to the desired work location

(c)7. Install the low single slide



(c)8. Insert the first door from above on one of the rails, insert the second from above on the other available rail

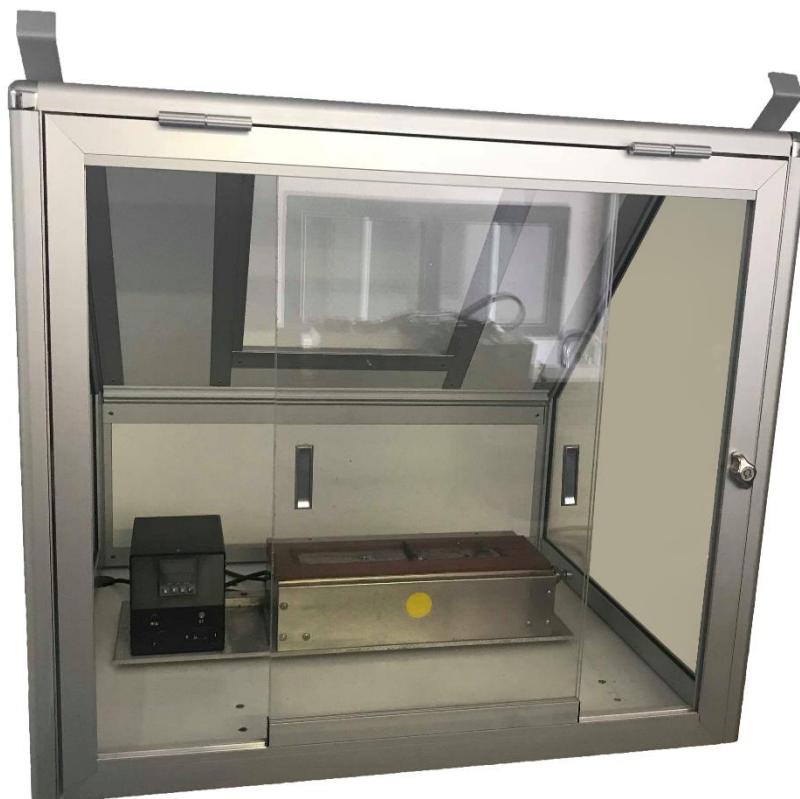

Nous contacter pour toutes interrogations

FTM Technologies SEM

78, rue Raymond Poincaré
92000 Nanterre, FRANCE

info@ftm-technologies.com

Tél : + 33 1 40 86 00 09

Fax : + 33 1 40 86 16 45