



HOT SPATULA


“SPAT 850”

ABSTRACT

SPAT850 is a special Appliance designed for repairing, reworking...in a large field of Works as:




- woodworking
- crafts
- sculpting, casting
- gluing, pasting
- bonding

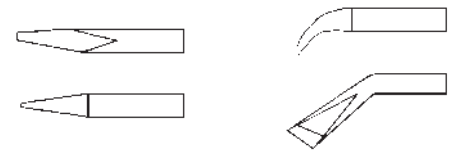

And other use as :

- heating
- marking
- encaustic
- soldering
- cleaning
- spatuling
- modelling

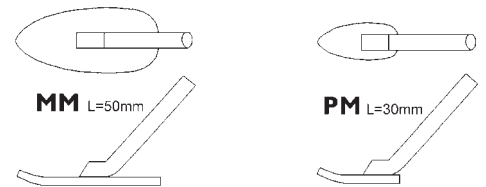

COMPOSITION

SPAT850 is made of :


- applying Iron, light but full powered **40W** in order to guarantee large heating supply.
- large choice of tips and spatula .

OPTIONAL : for a better accuracy and quality of use, SPAT850 can be connected to the special Power Regulator réf. **RP500** enabling a large range of temperature from 0 to 400°C max (0 to 250° with SPAT850BT low temperature Iron)

TECHNICAL DATA

Iron

- 230V 40W 50Hz power supply
- “hi reliability” heating element
- stainless steel body
- handle made with ABS
- max temperature 350 or 400°C depending spatula size

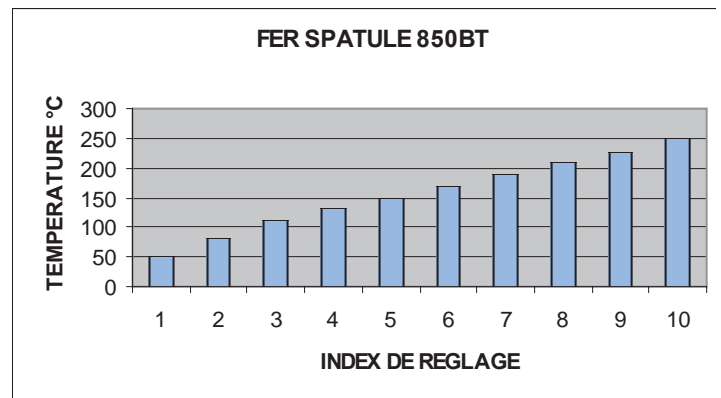

Leading French Manufacturer for Electronic Industry

FTM TECHNOLOGIES 78, rue Raymond Poincaré -92000 NANTERRE-FRANCE Tél : +331.40.86.00.09- Fax : +331.40.86.16.45

Web: www.ftm-technologies.com - Email : info@ftm-technologies.com