

## ELECTRONIC SET TO RESTORE AC5S


### GENERAL

**AC5S** is a special Appliance designed for repairing, reworking...in a large field of Works as:




AC5S with his 3 differents spatulas tips

- woodworking
- crafts
- sculpting, casting
- gluing, pasting
- bonding

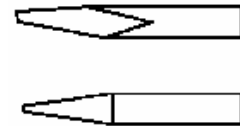

And other use as :

- heating
- marking
- encaustic
- soldering
- cleaning
- spatuling
- modelling

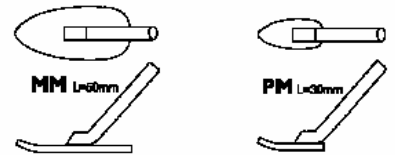

### COMPOSITION

**AC5S** is made of :

- a control unit on the power sector 230V ,
- an high power soldering iron **(50W) ensuring a significant reserve of temperature;**

**it is supplied with low safety voltage 24V per unit**

We also offer an extensive selection of nozzles, spatulas, tips etc ... nickel, chrome or Teflon treated. Thanks to the electronic control, the precise desired temperature is kept constant and permanently displayed; power guarantees over a temperature rise very rapidly, and regulation, a very low consumption.

### SPECIFICATIONS

#### **Control unit**

- Power 230V 50Hz
- Low Output Voltage 24Vac with 4kV isolation
- thermoplastic enclosure treated anti-static
- control button for the desired temperature 40 to 250 ° C (tolerance + / -2%)
- display the actual temperature on 3 digits
- On / Off switch lights
- Electronic microprocessor to EMC standards

#### **Iron applicator**

- Power 24V 50W
- connecting cord fireproof and anti-static
- heater wound "high stability"
- making reliable temperature thermocouple at the end of element
- Stainless steel heating body