
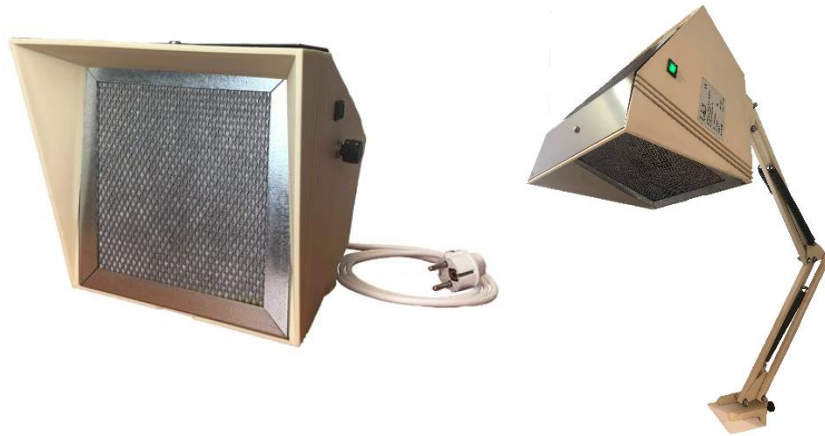


## Mini-hood – HI8V


 Mini-hood for treatment of solvents, smoke, application of glues or small particles of dust. Suitable for small filtration which requires flow variation, just has to be laid on bench next to the emanations source



- ✓ Variable flow mini-hood
- ✓ Very easily displaceable thanks to its low weight
- ✓ Can be placed directly on the working plan close to the emanation source. It can also be mounted on an articulated arm

### Technical data


Variable flow	0 to 240 m <sup>3</sup> /h
Power	85 W
L x H x D	240 x 200 x 300 mm
Weight	2,8 kg
Mains supply	230 V / 50 Hz
Maintenance	Periodic change of the filter

-  Used in recycling with an active carbon filter or a particle filter
- No external rejection
- Possibility of using protection prefilters to lengthen the life of activated carbon filters


### Accessories and consumables



Articulated arm BHI8

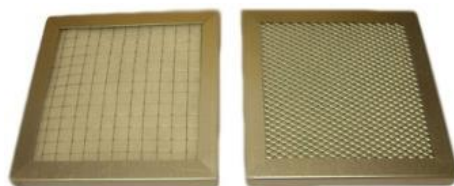

Dust filter FA2

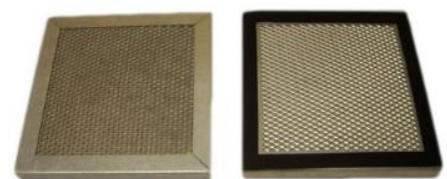

Active carbon filter FC2