

Multi-operator hood – HI4P4S

 Mobile extractor for handling chemicals, solvents, soldering fumes, small particles, glues etc.




- ✓ Fume hood with variable flow, to be placed underneath the work plan
- ✓ Enables 4 connections of suction arms
- ✓ Delivered with 4 x 3 m of PVC corrugated hose and 3 caps to close unused inlets
- ✓ Many accessories for captation to be connected to the hood

Technical data

Variable flow	50 to 450 m ³ /h
Power	72 W
L x H x D	350 x 430 x 200 mm
Weight	5,7 kg
Mains supply	230 V / 50 Hz
Maintenance	Periodic change of the filter
Outer rejection	Yes, Ø125 mm

HI4P4S can be used both ways :

-  As a recirculating (ductless) fume hood with an active carbon filter or a particle filter
 - Or as an external rejection system using a dust filter and an exhaust duct Ø125 mm
- Possibility of using protection prefilters to lengthen the life of activated carbon filters

Accessories and consumables



TERFU75 Arm



Standard segment suction arm



AP2 Suction plate

[How to choose a filter ?](#)


[Find all our filters on www.ftm-technologies.com](http://www.ftm-technologies.com)

<i>Standard version</i>	<i>ESD version</i>	<i>Description</i>
 ref. 89 220/226	 ref. 89 320/226	Segment suction arm Length 770 mm
 ref. 81 201	 ref. 81 301	9 additional segments Total length 300 mm
 ref. 81 205	 ref. 81 305	Tapered oval nozzle Length 150 mm
 ref. 81 203	 ref. 81 303	Round nozzle Diameter 119 mm
 ref. 81 204	 ref. 81 304	Rectangular nozzle Dimension 157 x 93 mm
	 ref. Q-AD426560	Large rectangular nozzle Dimension 356 x 216 mm
 ref. 81 208	 ref. 81 308	Slide valve
 ref. 81 208 G315	 ref. 81 308 G315 ESD	Grid filter Length mesh about 0,6 mm
 ref. BF	 ref. BF ESD	Table clamp Fixed with 2 clamps

FTM Technologies offers a mobile version of the HI4P4S fume hood

Equipped with one or two arms, segmented arm or articulated arm version, the HI4P4S rolling hood allows a great flexibility in the workshop, positioned near the point of emission

Roulante_HI4P4S

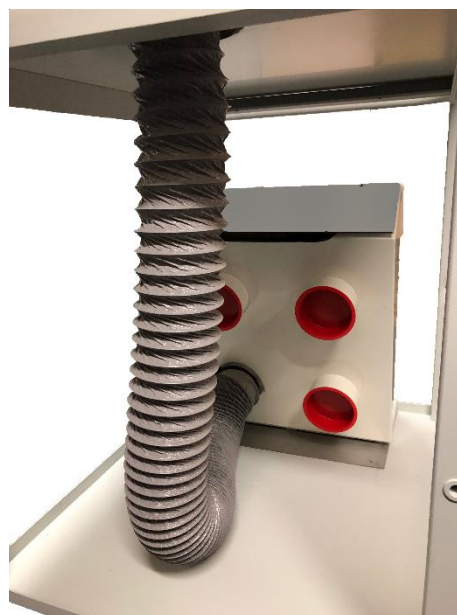

- ✓ Dimension 640 x 550 x 840 mm
- ✓ Pre-drilled stratified tray 40 mm thick
- ✓ 4 wheels, 2 with brake