

Hood with visor – HI1P

 Mobile extractor for handling chemicals, solvents, soldering fumes, small particles, glues etc.



- ✓ Portable fume hood
- ✓ Large suction surface
- ✓ Does not encumber the working plan
- ✓ Integrated lighting
- ✓ Visor adjustable in height, prevents risks of splattering

Technical data

Variable flow	50 to 450 m3/h
Power	80 W
L x H x D	350 x 470 x 500 mm
Weight	7 kg
Mains supply	230 V / 50 Hz
Maintenance	Periodic change of the filter
Outer rejection	Yes, Ø125 mm

HI1P can be used both ways :



As a recirculating (ductless) fume hood with an active carbon filter or a particle filter
Or as an external rejection system using a dust filter and an exhaust duct Ø125 mm
Possibility of using protection prefilters to lengthen the life of activated carbon filters




Accessories and consumables



Active carbon filter FCP1



Dust filter FPP1

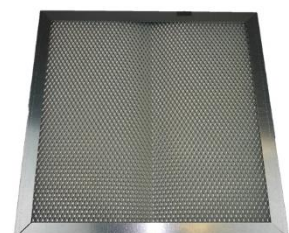

Particle filter FAP1

[How I choose a filter ?](#)

[Find all our filters on www.ftm-technologies.com](http://www.ftm-technologies.com)