


Fume cabinet – HI5VPP


 Fume cabinet are generally used for needs of filtration needing a cantonment of space, such as cleaning solvent, machines exhaling a batch of fumes, aerosol application, handling chemicals products, varnishing, tinning etc.



- ✓ Fume cabinet with one extraction group
- ✓ Easy mounting, readily movable and removable
- ✓ Aluminium silken profile
- ✓ Filling : Tempered glass 6 mm and white melamine 19 mm
- ✓ Integrated lighting
- ✓ Lift-up door, hands passage 200 mm

Technical data


Variable flow	50 to 450 m ³ /h
Power	80 W
L x H x D	800 x 700 x 700 mm
Weight	33 kg
Mains supply	230 V / 50 Hz
Maintenance	Periodic change of the filter
Outer rejection	Yes, Ø125 mm

-  HI5VPP can be used both ways :
- As a recirculating (ductless) fume hood with an active carbon filter or a particle filter
 - Or as an external rejection system using a dust filter and an exhaust duct Ø125 mm
 - Possibility of using protection prefilters to lengthen the life of activated carbon filters

Fume cabinet without door – HI5VP



The HI5VP fume cabinet is available in various sizes

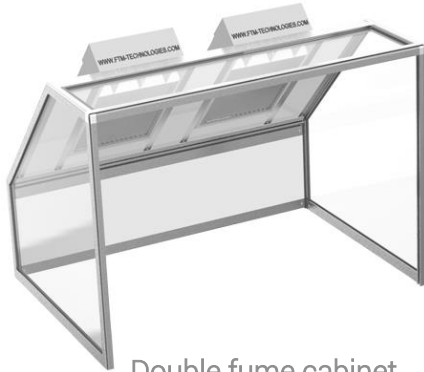

Double fume cabinet



Triple fume cabinet

Options for the HI5VP




Optional glass strip



Optional lift-up door



Optional hinged door

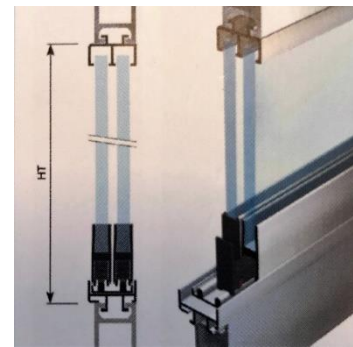

Optional sliding door

Fume cabinet – HI6VP



- ✓ Fume cabinet with one extraction group
- ✓ Hand clearance 390 mm, or to define
- ✓ Work above the product thanks to the protection glass

Some examples of tailor made fume cabinets

