


# Multi-operator hood – HI4P6S

 Mobile extractor for handling chemicals, solvents, soldering fumes, small particles, glues etc.

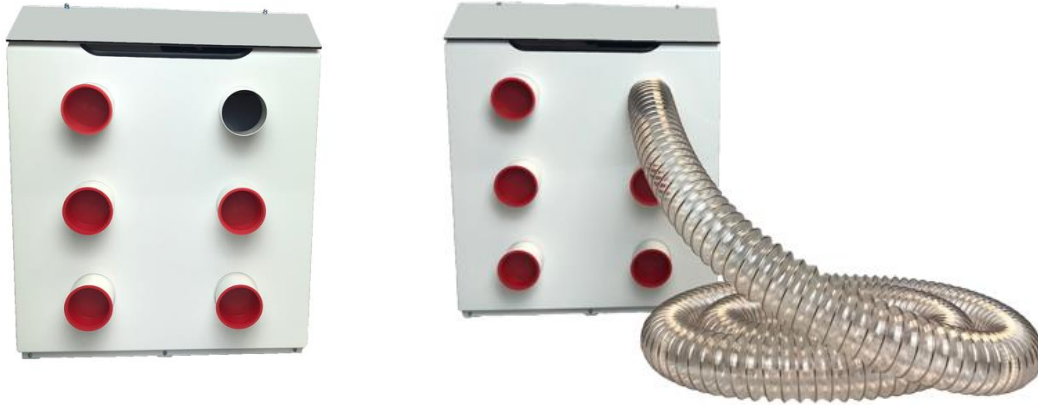


- ✓ Fume hood with variable flow, to be placed underneath the work plan
- ✓ Enables 6 connections of suction arms
- ✓ Delivered with 1 x 3 m of polyurethane hose and 5 caps to close unused inlets
- ✓ Many accessories for captation to be connected to the hood

## Technical data

Variable flow	50 to 450 m <sup>3</sup> /h
Power	72 W
L x H x D	350 x 430 x 260 mm
Weight	5,7 kg
Mains supply	230 V / 50 Hz
Maintenance	Periodic change of the filter
Outer rejection	Yes, Ø125 mm

HI4P6S can be used both ways :

-  As a recirculating (ductless) fume hood with an active carbon filter or a particle filter
  - Or as an external rejection system using a dust filter and an exhaust duct Ø125 mm
- Possibility of using protection prefilters to lengthen the life of activated carbon filters

## Accessories and consumables



ME50 Arm



Polyurethane flexible hose



AP1 Suction plate

How to choose a filter ?

Find all our filters on [www.ftm-technologies.com](http://www.ftm-technologies.com)