
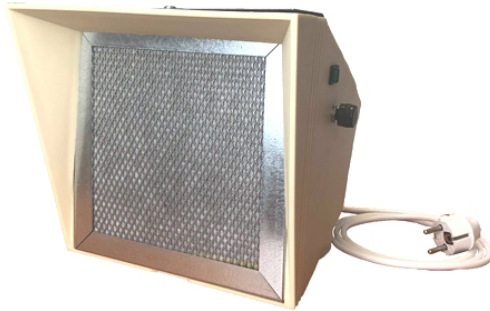


Mini-hood – HI8V

 Mini-hood for treatment of solvents, smoke, application of glues or small particles of dust. Suitable for small filtration which requires flow variation, just has to be laid on bench next to the emanations source



- ✓ Variable flow mini-hood
- ✓ Very easily displaceable thanks to its low weight
- ✓ Can be placed directly on the working plan close to the emanation source. It can also be mounted on an articulated arm

Technical data

Variable flow	0 to 240 m3/h
Power	85 W
L x H x D	240 x 200 x 300 mm
Weight	2,8 kg
Mains supply	230 V / 50 Hz
Maintenance	Periodic change of the filter



Used in recycling with an active carbon filter or a particle filter

No external rejection


Possibility of using protection prefilters to lengthen the life of activated carbon filters




Accessories and consumables



Articulated arm BH18

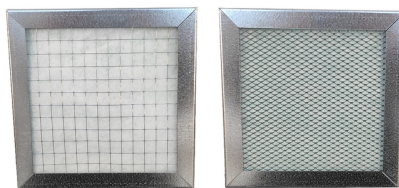

Dust filter FA2

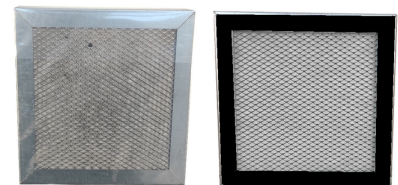

Active carbon filter FC2

Find all our filters on www.ftm-technologies.com

[How to choose a filter ?](#)